Pretika

SonicPulse™ Facial Brush

Exfoliate, Enhance and Smooth

User Manual & Warranty Information Model ST257

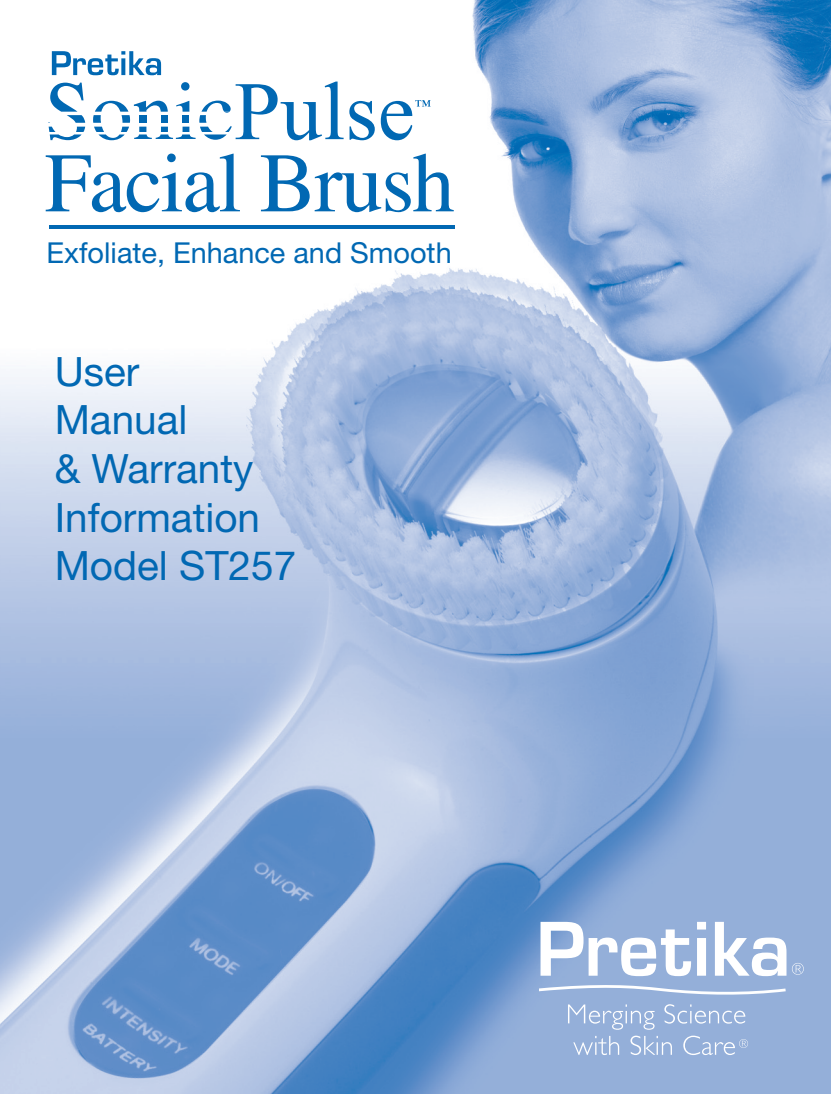

Pretika®

Merging Science with Skin Care®

Pretika SonicPulse™ Facial Brush

Exfoliate, Enhance and Smooth

Congratulations and thank you for being a Pretika customer! Before you start, please take a moment to get to know your SonicPulse Facial Brush by carefully reading the User Manual included with your new product.

SonicPulse™ Facial Brush Features

SonicPulse is a facial brush that combines two separate features– a **High Frequency Vibration Cleansing Technology** to exfoliate the outer (Epidermal) layer of dry and flaking skin cells and a **Micro-Pulsating Vibration Massage Probe** to enhance the absorption of skin care products into the skin.

Use separately or in combination with cleansers, scrubs, anti-aging, moisturizing and other skin care products for smoother, firmer, more hydrated skin.

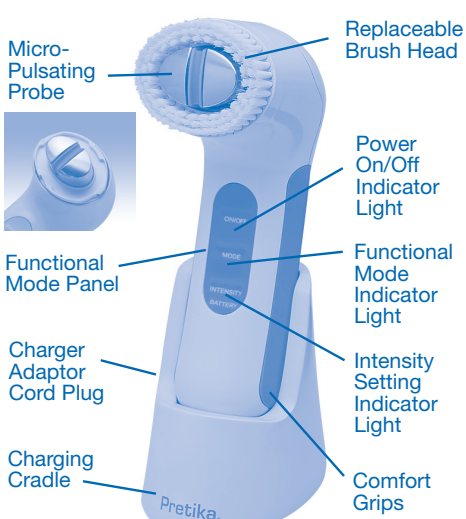

Charging

1. Make sure metal pads on base of Handle are aligned with metal pads inside Cradle - a flashing red light will blink indicating the metal contact points are aligned and the device is charging. A full charge is indicated by a solid red light. When battery power is low, a yellow light will appear– indicating time to recharge.

2. The SonicPulse may show a “solid red” light (indicating full charge) when charged for the 1st time (no “red” blinking light) – this is normal since each product is fully checked before shipment. If you’re charging for the 1st time and the charging light is “solid red” – still charge the device to get a “full” charge before first use.
3. **IMPORTANT:** Make sure metal contact points on handle and the Brush Head are dry before placing into cradle for charging.

For best results charge your SonicPulse for 24 hours prior to first use. Simply place SonicPulse into Cradle with metal contact pads on Device Handle aligned with metal pads inside Cradle. Plug Charger Cord (Adaptor) into wall socket and Connector Cord into the back of the Cradle, a red light will blink indicating the metal pads are aligned and your SonicPulse is charging. The SonicPulse features an Over Charge Protections feature – so the device can be charged full time in the charging cradle. Pretika recommends that after each full charge to unplug and conveniently store the charging adaptor until charging is required. You can leave the SonicPulse in the Cradle as a counter top stand when not charging. Keep Cradle and Charging Adaptor away from water.

Specifications

AC Adaptor – Input: 100-240V AC 50/60 Hz, Output: 5V DC 500 mA
Li Cell Battery

Micro-Fiber Bristle Brush Heads– Attach and Remove

To attach Brush Head, align pins on the underside of applicator to slots on device head. Once aligned, turn counter clockwise (left) until securely in place. To remove the Brush Head, simply grip the outer plastic base of the Brush Head firmly in one hand and the facial brush handle in the other hand – then turn clockwise (right).

Using SonicPulse™ Facial Brush

Step 1 SonicPulse™ High Frequency Vibration Cleansing Applicator
Use daily to remove the Epidermal (outer) layer of dry and flaky skin cells.
For Use Separately
Follow instructions to attach applicator. Dampen face with warm water. Press firmly to treated area, select mode and move Facial Brush in an upward, circular motion. Recommended time per treated area is 30 seconds for each area - forehead, nose, chin and each cheek. The micro-fiber bristle brush applicator is effective in removing the outer layer of dry and flaky skin cells, lifting out impurities from within the pores and build-up of debris from within the folds of fine lines and wrinkles to help smooth the surface of the skin.

For Use in Combination with Skin Care Treatments
Apply cleanser, scrub or microdermabrasion crème treatments onto the skin – spreading into a thin layer over the skin before use. Press firmly to treated area, select mode and move Facial Brush in an upward, circular motion. Recommended time per treated area is 30 seconds for each area - forehead, nose, chin and each cheek.

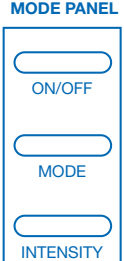

- Press On/Off Button – solid red light will appear
- Press Mode Button to Vibration setting – red light pulsating cleansing, blue light high frequency cleansing
- Press Intensity Mode Button to Setting for – LOW blue light, HIGH red light
- Press On/Off Button to turn off– solid red light will disappear

SonicPulse™ Micro-Pulsating Vibration Massage Probe
The Micro-Pulsating Probe mode can be used separately – or combined with the High Frequency Cleansing mode.

Micro-Pulsating Vibration Massage Probe Only Mode
Follow instructions to remove applicator. Apply anti-aging, moisturizing and other skin care treatments onto the skin – spreading into a thin layer over the skin. Press firmly to treated area and move **Facial Brush** in an upward, circular motion. Recommended time per treated area is 30 seconds for each area - forehead, nose, chin and each cheek to enhance absorption of skin care treatments into the underlying skin.

- Press On/Off Button – solid red light will appear
- Press Mode Button to Vibration setting – red light pulsating, blue light high frequency
- Press Intensity Mode Button to Setting for – LOW blue light, HIGH red light
- Press On/Off Button to turn off– solid red light will disappear

Allow all skin care treatments to be absorbed into the skin – any residue remaining on the skin should be kept on to be naturally absorbed into the skin. Using the Probe without skin care treatments in an upward, circular motion may help to smooth the outer layer of skin.

Clean **Micro-Pulsating Probe** after every use. Rinse clean and remove residue with warm water and mild soap to remove any build-up that may have accumulated, shake off excess water and towel dry – or gently rub the probe against a towel for 5-10 seconds while the SonicPulse is on. Do not place Device into charging Cradle with wet probe.

Caring For Your SonicPulse™ Facial Brush

Micro-Fiber Bristle Brush Heads

1. Clean Brush Heads after every use. Remove Brush Head, rinse clean with warm water and mild soap to remove any build-up that may have accumulated, shake off excess water and towel dry – or gently rub the Brush Head against a towel for 5-10 seconds while the SonicPulse is on. Do not attach wet Brush Head to handle while charging.
2. Do not allow liquid cleansers or moisturizers to accumulate on Brush Head.
3. Unplug the charging cradle before you clean.
4. Replace Brush Heads as needed – they can be purchased at from your retailer or online at www.pretika.com.

Facial Brush Handle

1. Do not use abrasive cleaners or chemicals to clean any part of the SonicPulse.
2. Clean handle with damp cloth – using mild detergent or warm water and towel dry immediately.

Charging Cradle

1. Unplug the charging cradle before you clean using mild detergent or warm water and towel dry immediately.

To Order Replenishment Sets or Replacement Parts

Visit our website at www.pretika.com – to see the innovative beauty, skin care, spa and personal care products from Pretika. Click on “Replenishment Sets” link to order using a credit card on our secure site.

Mail or fax orders to:

Pretika Corporation
Customer Service Department
16 Salermo, Laguna Niguel, CA 92677-9032
Phone: 949-481-8818 (8:00 AM to 5:00 PM, PST)
Fax: 949-481-8828
E-Mail: customerservice@pretika.com
Website: www.pretika.com

Pretika®

Merging Science
with Skin Care®

Warning

1. For external use only. Keep out of reach of children and please use as directed. Avoid contact with eyes. As with any product, discontinue use if rash, redness or itching occurs. Consult physician if irritation persists. Anyone suffering from acne or any skin disorder should consult physician before using this product. Do not use on sore or injured areas.
2. Use this appliance only for its intended use as described in the Use Manual.
3. When using with skin care treatments avoid contact with eyes. As with any skin care treatment, discontinue use if rash, redness or itching occurs. Consult physician if irritation persists.
4. Do not use attachments not recommended by manufacturer.
5. Do not leave unit on when not in use.
6. Do not apply extreme pressure when using unit or when replacing attachments. This could damage product. The attachments are delicate and must be attached and removed with care. Not following operating instructions carefully may result in damage to the SonicPulse unit and attachments.
7. Basic safety precautions should always be followed when using any electrical product, especially when children are present.
8. Never operate the SonicPulse Charger if it has a damaged cord or plug, if it is not working properly, or has been dropped into water.
9. Do not place or store the cradle and charging cord unit where it can fall or be pulled into tub, sink, water or other liquid.
10. Do not reach for cradle or charger cord unit that has fallen into water, unplug immediately.
11. Keep the cord away from heated surfaces
12. Do not attempt to open the Brush Handle to clean the interior.
13. Do not plug into an incorrect voltage source outlet, use only with appropriate voltage

Limited 90 Day Warranty

Warranted from date of purchase against defects in material and workmanship. This warranty does not include damage to the product as a result of misuse or accident. Some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have

other rights, which vary, from state to state. Pretika Corporation shall not be liable for any incidental or consequential damages arising out of defects in this product, whether or not caused by its negligence.

During Warranty Period with Proof of Purchase (store receipt)
Should your product become defective during the warranty period, package the item securely and return it prepaid/insured – along with proof of purchase to:

Pretika Corporation
Warranty Repair Department
12215 Holly Street
Riverside, CA 92509-2315

To insure prompt repair, provide complete, legible name, address and phone number information and a note indicating the nature of the product defect. We will Repair or Replace (at our sole discretion) product at no charge.

Outside Warranty Period
Should your product become defective outside the warranty period – or you do not have store receipt, package the item securely and return it prepaid/insured along with a check or money order payable to Pretika Corporation in the amount of $40.00 to cover replacement and return postage charges.

Pretika®
Customer Service

For questions or assistance relating to the use of this product– or for information on all of the innovative Beauty, Skin Care, Spa and Personal Care products manufactured by Pretika, contact our Customer Service Team at 949-481-8818 Phone (8:00 AM to 5:00 PM, Pacific Standard time, Monday through Friday), 949-481-8828 Fax or by email at customerservice@pretika.com.